



ELEVATOR CONTROL SYSTEM

C4 MACHINE ROOM MONITORING


Smarterise's Machine Room Monitoring lets you check the health of all cars in a group, showing mechanics real-time data for each car, including which floor, the direction of the car, car speed, and if a fault has occurred. Smarterise MRM also allows you to adjust any parameters, activate and deactivate Car Call/Hall Call Security, and place car and hall calls. Mechanics and Engineers will be able to store and backup all this information while also updating software on the fly.



BENEFITS

- Display live data of each car (floor, direction, speed, door states, if a fault has occurred)
- Store faults and alarms
- Adjust any parameters using the parameter section of the GUI
- Adjust Inputs and Outputs
- Adjust the time in a group
- Update software (bootloader), backup parameters, and restore parameters
- Dynamic security feature enabling rule configuration by day, hour, car, or floor.
- Ability to add or modify floor access codes for controlled access.
- Replay panel enables review of car status before, during, and after fault or alarm events.
- Intelligent parking management using configurable rules or historical data analysis
- Check predefined I/O with board pin locations and modify assigned I/O as needed.

Car	Floor	Fault	Name	Description	Indicate	Date
1	1	F141	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:27
1	1	F140	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:27
1	1	F139	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:27
1	1	F138	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:27
1	1	F137	M16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F136	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F135	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F134	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F133	M16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F132	M16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F131	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F130	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F129	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F128	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26
1	1	F127	CP16 Board Fail	Processor was reset, triggered by power loss at user request.	NA	Apr 14 2019 15:11:26

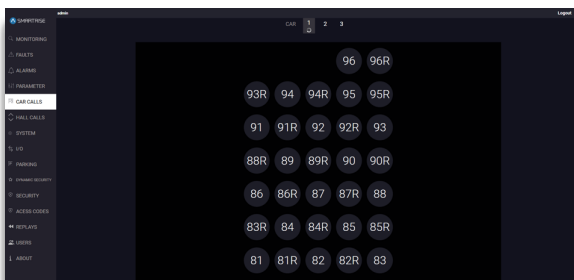

FEATURES

- Display live data of each car in multiple groups
- Place Car Calls and Hall Calls
- Activate and deactivate Car Call Security

Contact our Sales Department at sales@smarterise.us to order or for more information.

Phone: 469-678-8000
Address: 1235 N. Union Bower Rd
 Irving, TX 75061
Website: SMARTRISE.US