

# SMART SERIAL NETWORK



Car Top Controllers

## Application

Localized control on top of car with full diagnostic and adjustment capabilities.

## Computer

SRU Dual Microprocessor

## Dimensions

18" H x 12" W

## Location

Top of Car

**The Car Top Controller** manages part of the safety logic. It connects to the top of the car components and the Traveler Cable.

## Application

Serial connection to hall fixtures

## Dimensions

2 ½" H x 2 ¼" W

## Additional Features

- Call buttons and other hall devices are wired locally to a Hall Board at the floor.
- All Hall Boards connect to the machine room via a shared 4-wire network or Cat-5 network cable.

**Our Hall Board** provides a serial connection to hall fixtures. It turns Top & Bottom Access Switches, Fire Service Switches, Hall Buttons & Lanterns, and Medical Service Switches into networked devices.



Hall Board




Contact our Sales Department at [sales@smartrise.us](mailto:sales@smartrise.us) to order or for more information.

**Phone:** 469-678-8000

**Address:** 1235 N. Union Bower Rd  
Irving, TX 75061

**Website:** [SMARTRISE.US](http://SMARTRISE.US)

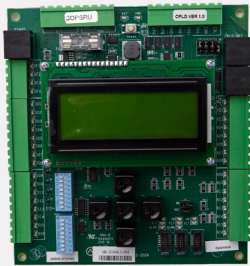

COP Controllers

<b>Application</b>	Localized control of car station functions, as well as full diagnostic and adjustment capabilities.
<b>Computer</b>	SRU Dual Microprocessor
<b>Dimensions</b>	7" H x 6" W
<b>Location</b>	Car Operating Panel

**Our Car Operating Panel Controller (COP)** gathers COP localized I/O's and connects to the Car Top Controller.



Contact our Sales Department at [sales@smartrise.us](mailto:sales@smartrise.us) to order or for more information.

**Phone:** 469-678-8000

**Address:** 1235 N. Union Bower Rd  
Irving, TX 75061

**Website:** SMARTRISE.US