

V2

DRIVE STARTUP MANUAL
HPV900-INDUCTION

VERSION 2.0



SMARTRISE

Page intentionally left blank

Document History

Date	Version	Summary of Changes
October 23,2018	1.0	Initial Submittal
December 17, 2019	2.0	Changed cover page New document format Reworked display screen shots to display as viewed Expanded on step by step procedures Replaced Construction section to include wiring to the CXN board

Page intentionally left blank

Table of Contents

HPV900-S2 Induction Drive	1
Equipment/Settings Verification.....	1
Magnetek Parameter Location Reference	2
Grounding Requirements	3
Wiring	3
Power	3
Brake	4
Motor/Encoder	4
Construction	5
Powering Up	6
Final Setup	7
Operation.....	9
No Faults	9
Proper Direction	9
At Speed	9
Under Control	9
Troubleshooting.....	9
Drive Fault/Encoder Fault.....	9
Brake Not Lifting	10
Wrong Direction	10
Car Moving to Slow or Rough	10
Setup Fault One	10
Appendix.....	11

List of Figures

Figure 1: HPV900-S2 Induction Drive.....1

Figure 2: Example of Parameter Table1

Figure 3: Ground Bus Terminal.....3

Figure 4: Example of Construction Wiring.....6

Figure 5: Breakers7

Figure 6: MAIN MENU – Setup7

Figure 7: SETUP Menu – Misc.....8

Figure 8: MISC Menu – Bypass Term Limits.....8

Figure 9: Bypass Term Limits Menu – NO.....8

Figure 10: Bypass Term Limits Menu – YES8

Figure 11: Main Line Connections11

Figure 12: Encoder Terminal Location12

List of Tables

Table 1: Terminal Descriptions	4
Table 2: Wiring References for Common Encoders	4

Page intentionally left blank

HPV900-S2 Induction Drive

The HPV900-S2 drive is an induction AC drive.



Figure 1: HPV900-S2 Induction Drive

Equipment/Settings Verification

Set and verify the equipment matches the job specific parameters for proper operation. See V2 Controller sheet 01 Getting Started Parameter Table for more information.

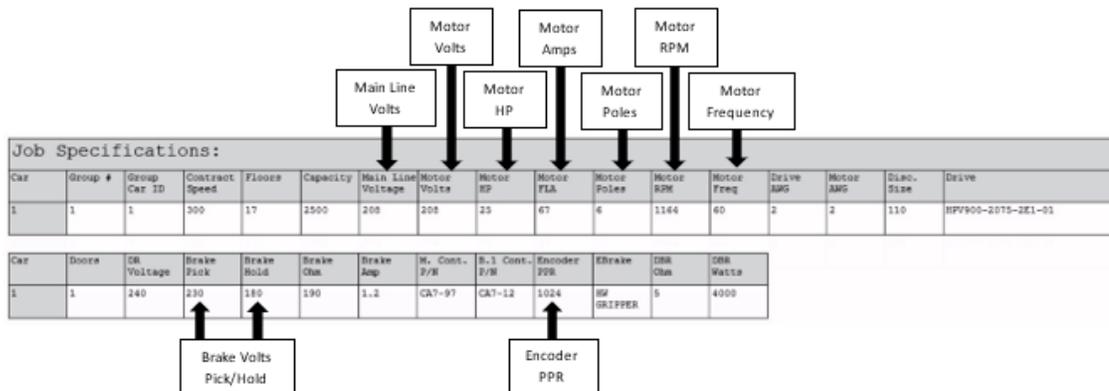


Figure 2: Example of Parameter Table

Magnetek Parameter Location Reference

Adjust A0

- **Drive A1**
 - Encoder Pulses (Encoder PPR – 1024/2048)
- **Power Convert – A4**
 - Input L-L Volts
- **Motor – A5**
 - Rated Mtr Power (Kw)
 - Rated Mtr Volts (VAC)
 - Rated Exit Freq (60Hz)
 - Rated Motor Curr (FLA – Amps)
 - Motor Poles
 - Rated Mtr Speed (RPM)

Configure C0

- User Switches – C1
 - Motor Rotation
 - Forward/Reverse
- Encoder Connect
 - Forward/Reverse

Grounding Requirements

NOTE: A proper and effective building ground connection is required for the safe and successful operation of the controller.

Examples of a proper building-to-controller ground is as follows:

1. Attach the ground wire to the street side of a water main.
2. Attach the ground wire to a grounding rod in the pit.

The controller has a common ground bus terminal connection.



Figure 3: Ground Bus Terminal

- The building, motor, transformer, and filter(s) must all share a common ground. This removes ground loops, limits impedance, and routes noise into the ground.

Wiring

A checklist must be completed during the drive wiring process. See Appendix for terminal locations.

Power

Perform the following to connect power. See *V2 Controller sheet 03 Machine Room* for job specific information.

- Connect main line power to terminal blocks L1/L2/L3.
- Connect the ground wire to the yellow/green terminal block next to L1-L3.

Brake

Perform the following to connect the brakes. See *V2 Controller* sheet *05 Brakes* for job specific information.

- Connect the main brake wiring to terminals K1/K2 and the secondary brake wiring (if equipped) to terminals J1/J2 located on the terminal block next to the M Contactor.
- Jump EB to the terminal on Construction Box and connect either the rope gripper or sheave brake to EBR (if installed). See *V2 Controller* sheet *01 Getting Started* for more information.

Motor/Encoder

Perform the following to connect the drive to the motor and encoder cable. See *V2 Controller* sheet *04 Motor and Drive Connections* for job specific information.

- Connect motor leads to the M contactor at T1/T2/T3.
- Connect the encoder cable to the drive terminal block TB1. See Table 2 for wiring samples and Appendix for wire terminal locations.

The table below lists the Terminal Descriptions. Record the encoder wiring color code for future release.

Table 1: Terminal Descriptions

TB1	Signal	Description	On-Site Color
17	V+ (Pwr)	+5V Power	
18	V- (COM or GND)	Common or Ground	
1	A+ (A)		
2	A- (/A)		
3	B+ (B)		
4	B- (B/)		
5	Shield	Shield Ground	

The Encoder Wiring List, shown in the table below, is just a partial list of common encoder cable codes for reference only. This may not represent the actual cable you have received with your encoder. Follow the actual pin-out instructions that came with your existing encoder.

Table 2: Wiring References for Common Encoders

Encoder	Imperial / PG-X3	Magil	IH740 / IH950	Accucoder	Wachendorff	Industrial Encoder (Canada)
PWR	Red (2)	Red (2)	Brown (2)	Brown	Brown	Brown

Encoder	Imperial / PG-X3	Magil	IH740 / IH950	Accucoder	Wachendorff	Industrial Encoder (Canada)
COM	Black (1)	Black (1)	White (1)	White	White (Shield)	White
A	White (3)	White (3)	Green (3)	Green	Green	Green
/A	Black/White (6)	Brown (6)	Pink (6)	Yellow	Red	Pink
B	Blue (4)	Green (4)	Yellow (4)	Gray	Yellow	Yellow
/B	Red /Black (7)	Blue (7)	Blue (7)	Pink	Black	Blue
Z	Orange (5)	Yellow (5)	Gray (5)	Blue	Gray	Gray
/Z	Green (8)	Orange (8)	Red (8)	Red	Violet	Red
DATA						
/DATA						
CLOCK						
/CLOCK						
SHIELD	Shield	Shield	Shield	Shield	Shield	Shield

Construction

Perform the following to wire the Construction box. See *V2 Controller sheet 01 Getting Started-* for job specific information.

1. Install jumpers between M24 and Input/Output (IO) as per print.
2. Using an external run box?
 - a. If using an external run box, go to step 3.
 - b. If not using an external run box, go to step 5.
3. Remove factory wires on inputs 521 and 522.
4. Install the Run Bug UP/DOWN switch to IOs 521 and 522.
5. Install the Run Bug UP/DOWN TIME switch to M24.
6. Install the Temporary Run switch between 120 and SFIN on the CXN board and 120 to THL, MHL, and BHL on the CXN board.
7. Are there two sheave brakes and no rope gripper?
 - a. If there are two sheave brakes and no rope gripper, go to step 8.
 - b. If there is a rope gripper or single sheave brake, the process ends.
8. Install a jumper between EB and SOUT.

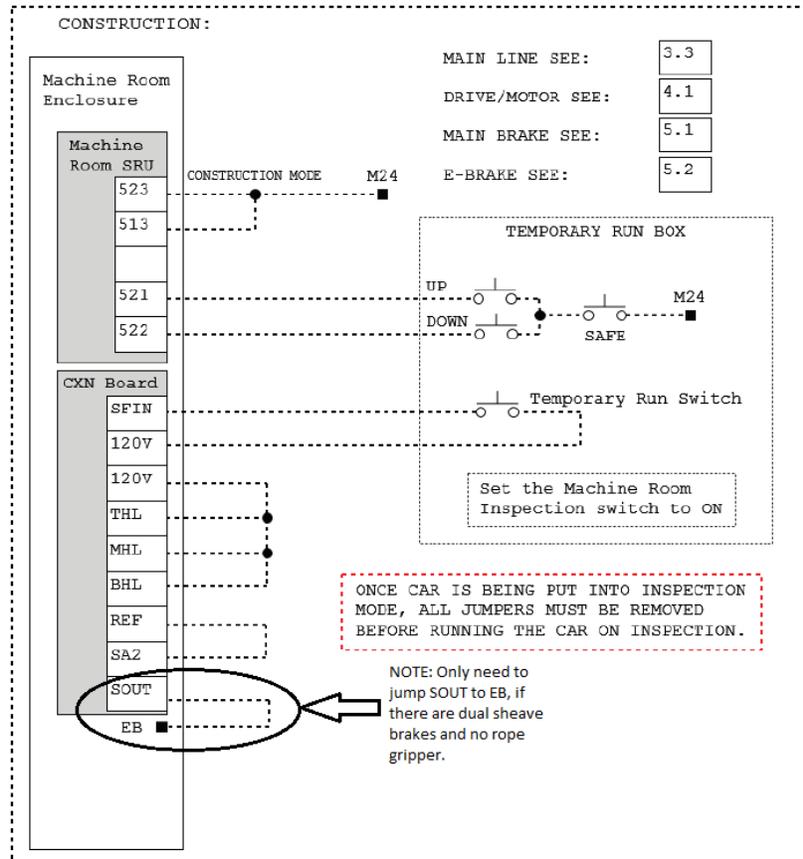


Figure 4: Example of Construction Wiring

Powering Up

A checklist must be completed during the powering up process.

Perform the following to power up the drive.

1. Apply external power by closing the main disconnect.
2. Close the two-pole breaker and all pushbutton breakers.

- Verify the LCD on the Smartrise board and the drive powers up.

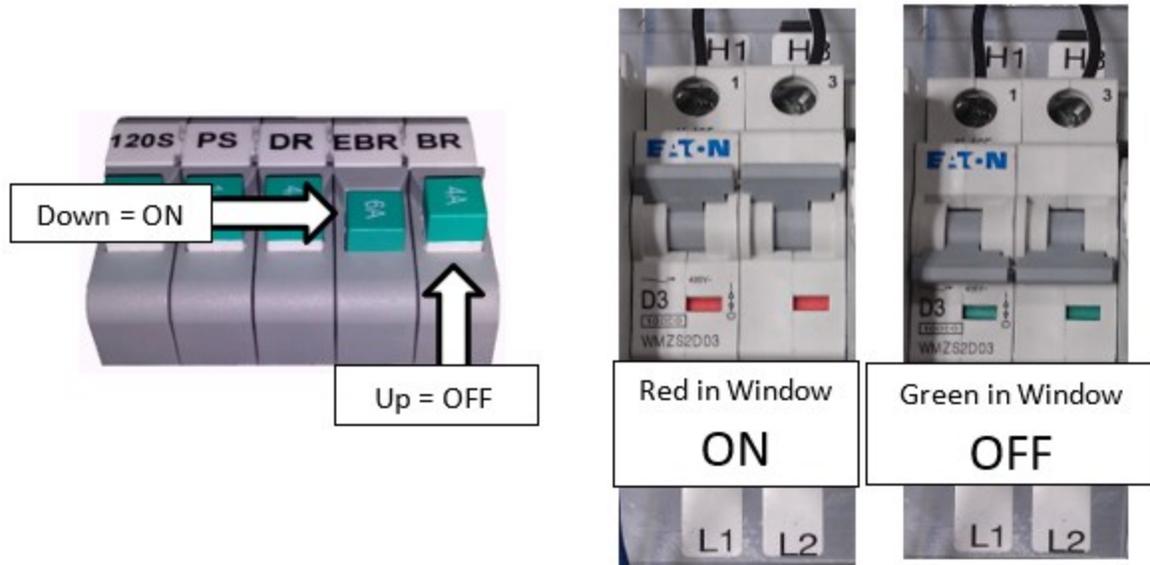


Figure 5: Breakers

Final Setup

A checklist must be completed during the final setup process.

Perform the following to set the Bypass Term Limit.

NOTE: The selected menu within the menu options is shown with a *.

- Toggle the Inspection/Normal switch to Inspection.
- On the Smartrise Machine Room board, press the left arrow (ESC) button several times to get to the MAIN SCREEN.
- Press the right button to access the Main Menu.
- From the MAIN MENU, scroll and select Setup.



Figure 6: MAIN MENU – Setup

- From the SETUP menu, scroll and select Misc.



Figure 7: SETUP Menu – Misc

- From the MISC menu, scroll and select Bypass Term Limits.

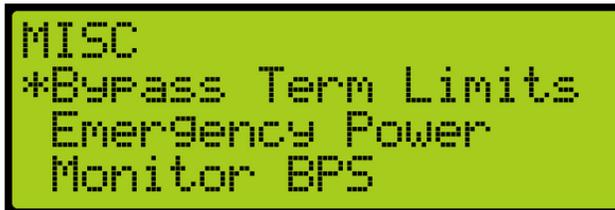


Figure 8: MISC Menu – Bypass Term Limits

- From the BYPASS TERM LIMITS menu, set the bypass term limits from NO to YES.



Figure 9: Bypass Term Limits Menu – NO

- Scroll and change NO to YES.



Figure 10: Bypass Term Limits Menu – YES

- Scroll right and press Enter to save.
- Press the left button several times to get to the MAIN SCREEN.
- Verify the LCD displays Construction Mode on the MAIN SCREEN.

12. Does the drive show a Setup Fault One on the display?
 - a. If the drive shows a Setup Fault One, go to Setup Fault One.
 - b. If the drive does not show a Setup Fault One, the process ends.

Operation

Run the car and complete the checklist during the verification process.

No Faults

Make sure the car is moving without triggering a fault either on the Smartrise SRU board or the drive. If the SRU board displays a drive fault, look at the drive to see what the fault is. See Drive Fault/Encoder Fault for troubleshooting drive fault.

Proper Direction

Make sure the car is moving in the same direction as the control switch on the Run Bug. See Wrong Direction for troubleshooting proper direction faults.

At Speed

Make sure the car is moving at the proper inspection speed (approximately 50 fpm). See Car Moving to Slow or Rough for troubleshooting at speed faults.

Under Control

Make sure that the car is moving under full control. The car should stop when commanded from the Run Bug. Verify that the car runs with no faults for 10 seconds or more. See Brake Not Lifting for troubleshooting under control faults.

Troubleshooting

The following sections list troubleshooting procedures.

Drive Fault/Encoder Fault

The most common fault at drive startup is the Encoder fault.

Perform the following checks to correct this fault:

- Check for a solid shield-to-ground connection at the motor and drive.
- Check for correct colored encoder wires to the terminals.

- Swap A+ and / A- on terminal TB1.

Brake Not Lifting

If the brake is not picking, make sure that the brake is wired according to *V2 Controller sheet 05 Brake Connection* and verify that the EB terminal is jumpered to the terminal. See *V2 Controller sheet 01 Getting Started* for more information.

If the brake has the proper voltage, check the following:

- During a run command, check the DC voltage between points K1/K2 and J1/J2 if secondary brake is installed. Verify the voltages are also at the brake coil(s) when commanded to pick.
- Verify that the actual brake voltage matches the brake coil voltage shown on the *V2 Controller sheet 01 Getting Started Parameter table*.

Wrong Direction

If the car is moving in the wrong direction, check the following:

- On the Smartrise controller board make sure that IO 521 comes on when commanding the UP direction and IO 522 comes on when commanding the DOWN direction.
- Swap two of the motor leads (T1 with T2).

Car Moving to Slow or Rough

If the car is moving to slow or rough, perform the following:

- Swap the encoder wires A+ and A- on drive TB1.
- Verify the brakes are lifting fully.

Setup Fault One

This fault is caused when the HPV900 is programmed with motor data (A5) that conflicts with the drive software.

1. Unplug the CAT5 cable from the drive port on the the Machine Room board. This will restore access to the HPV LCD screen.
2. Navigate to A5 – Motor Parameters – Motor Poles and verify that you have the correct number of poles listed.
3. Navigate to A5 – Motor Parameters – Rated Motor Speed and lower the RPM by 15-20 rpms and save.
4. Plug the CAT5 cable into the drive port on the Machine Room board.

Appendix

The figures below show the Main Line and Encoder terminal locations.

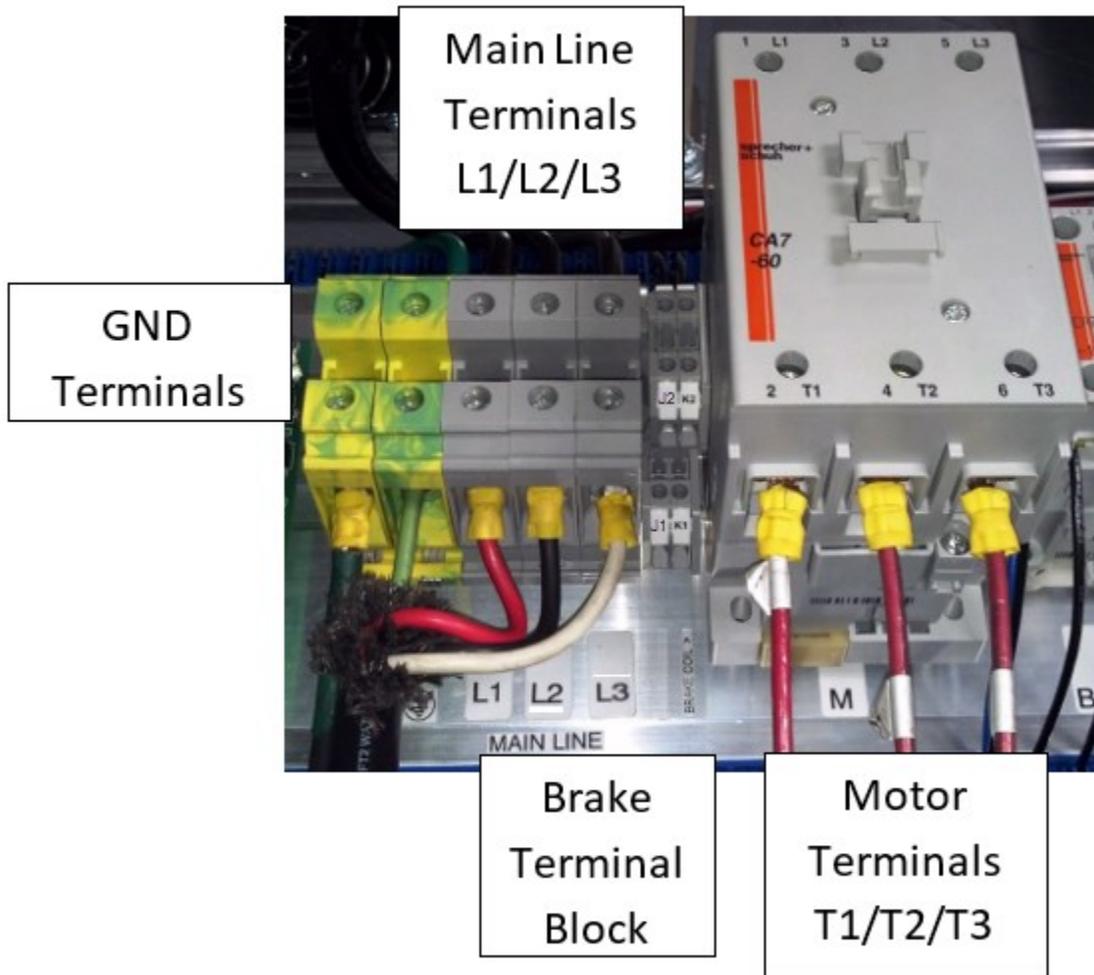


Figure 11: Main Line Terminal Locations

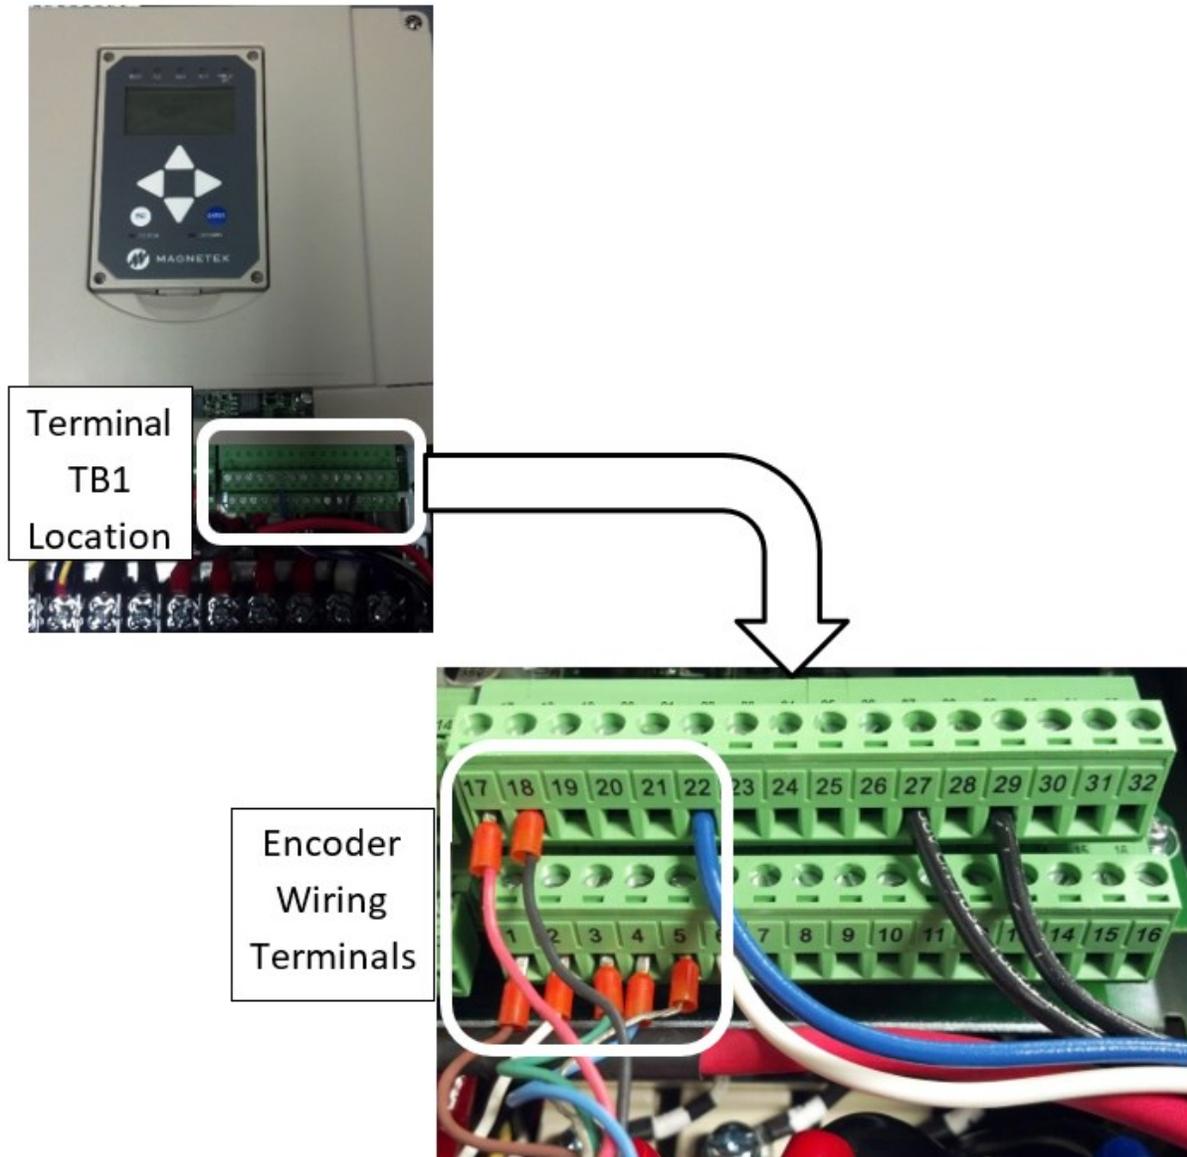


Figure 12: Encoder Terminal Location